



NURIT 30XX / 80XX QUICK REFERENCE GUIDE
APPLICATION POS 4.70 OR HIGHER - RETAIL AND RESTAURANT

Press **[MENU]** to access or exit the Main Menu or to go back one menu level.

Press **[RETURN / ▲]** and **[FORCED / ▼]** to scroll up and down through the menu options.

1. REPORTS

1.	DEFAULT REPORT	Prints programmed default report.
2.	CURRENT REPORT	Prints a report of the current transactions: Offers several options: Used to change default report setup.
3.	HISTORY REPORT	Prints previous batch totals: Prints Combined or Per Batch totals: Maximum of 30 days.
4.	DISPLAY TRANS.	Displays current transactions offering different sorting options.
5.	LAST RECEIPT	Prints a copy of the last approved receipt. (Transaction must be last function performed.)
6.	PERFORMANCE	Prints percentage of Approvals, Denials, Disconnects, Manual Entries and Swipes: Reset option.
7.	TIP REPORT	Prints tip details for all servers or a specific server.
8.	REPORT SETUP	Offers option to print Visa/MC transactions together or separately: Setup tip discount.

2. MERCHANT PARAMS

1.	AUTHORIZATION	Enables/disables different card and transaction types: Debit mode.
2.	SECURITY LEVEL	Sets security levels for different operations.
3.	EDIT HEADER	Edits the five line, 24 character header.
4.	EDIT TRAILER	Edits the five line, 24 character trailer.
5.	SET CASH EDC	Enables/disables recording of cash transactions.
6.	MERCHANT FEE	Enables and sets the surcharge rate for debit transactions.
7.	SET BATCH TIME	For Host Capture/Autobatch terminals, sets time terminal will print batch report.
8.	SERVER/INVOICE	Enables/disables Server, Invoice, Table and Guest No. Modes. (Table and guest for restaurant only).
9.	SITE ID	View or change Site ID.

3. MERCHANT OPTIONS

1.	PAPER TYPE	Offers choice between single ply, double ply or custom (two receipts for debit).
2.	NO PAPER MODE	Disables print function (integrated or stand alone).
3.	BUZZER SET	Enables/disables tone when pressing keypad.
4.	OPERATION MODE	Toggles between Normal and Demo Modes.
5.	BATTERY SAVER	Offers option of turning Radio Only, Terminal Only, Radio and Terminal or neither off after a period of inactivity.
6.	PRINT DISCLAIMER	Enables/disables print of the disclaimer on each receipt.
7.	SET MENU TYPE	Toggles between manual scroll and auto scroll.
8.	SET HALO	Maximum dollar limit for a Sale, Return or Cash Back.
9.	PRINT SETUP	Prints terminal setup report listing; Current application, Header, Trailer, Card and transaction types, Paper type, Surcharge, Security settings, PIN Pad info, HALOs, Modes, Tip settings and Hot Keys.
10.	STORE & FORWARD	Enables/disables offline settings: Upload transactions: Resend/delete failed transactions.
11.	CHECK READER	Enables/disables check imaging for upload to the Web.
12.	SIGNATURE OPTION	Initializes an E-Pad allowing the capture of signatures for upload to the Web.
13.	BRIDGE COMM	Allows communication between terminal and web.

4. HOST PARAMS

1.	HOSTS PARAMS	Edit parameter settings for all hosts.
2.	HOST PHONES	Edits authorization and batch phone numbers for all hosts.
3.	PRINT EDC SETUP	Prints EDC report listing; EDC types available, All EDC hosts, Capture types, Host parameters, Radio information (when applicable), AutoDial settings.
4.	PROTOCOL VER	Displays host protocol name and version.
5.	AUTODIAL SETUP	Sets the terminal to automatically dial out for manual batching.
6.	HOST RADIO ADDR.	Displays programmed host radio address. (3010 / 8000 Only)

5. SYSTEM OPTIONS

1.	SET TIME / DATE	Sets terminal's date (mm/dd/yy) and ime (hh:mm:00); Clock is 24 Hour/Military time.
2.	EDIT PIN KEY	Edit host processor working key for debit processing.
3.	SEL. MSTR KEY	Change Master Key location.
4.	SET BATCH NO.	Change the current batch number.
5.	EDIT DATABASE	Void transaction: Clear database for selected or all EDC Types.
6.	WORKING MODE	Offers the ability to: Change application type (when applicable); Tip options for retail and restaurant; Tab options for restaurant; AVS; Card Present options (when applicable).
7.	TEST MODE	Programming purposes only.
8.	PREDIAL CALL	Enables/disables terminal dialing immediately once card is swiped.
9.	PINPAD INIT.	Initialize external PIN Pad when necessary.
10.	PINPAD FUNC.	Allows encryption of working key in terminal
11.	PINPAD CONFIG.	Toggles between internal or external PIN Pad.
12.	STATUS BAR	Enables/Disables status bar display on wireless units; battery charge and signal strength. (3010 / 8000 Only)

6. RADIO TEST

1.	RADIO TESTS (3010 / 8000 ONLY)	Mobitex & Motient Units: Signal strength; MAN or ILL number; Radio Information CDPD Units: CDPD tests; Diagnostic menu
2.	PRINT PARAMS (3010 / 8000 ONLY)	Mobitex or Motient Units: Prints radio type; MAN/LLI number; Radio addresses. CDPD Units: Prints radio type; Self IP address; Destination IP addresses.
3.	BATTERY TEST	Tests the battery.

7. DOWNLOAD

1.	PARAMETERS	Downloads host and merchant parameters only.
2.	AUTOLOAD	Downloads full application and parameters.
3.	APPLICAT. ONLY	Downloads application only, no host or merchant parameters.
4.	COMM. PARAMS	Sets communication parameters for downloading.

8. COMMUNICATIONS

1.	MIN. RETRIES	Number of times the terminal will call host processor before timeout.
2.	DIAL : TONE	Sets pulse or tone (DTMF) dialing.
3.	EXCHANGE PREF	Enables/disables and stores digit for dialing an exchange prefix before phone number.
4.	GATEWAY	Programming purposes only
5.	SUFFIX	Enables/disables and stores digit for dialing a suffix after phone number.
6.	VIA: LINE / RADIO	Toggles between Radio/Land Line and Land Line Only. (3010 / 8000 Only)
7.	CHK LINE: ON	Enables/disables the check line function.
8.	D. TONECHK: ON	Enables/disables the dial-tone check function.